



The Booster time control to bring on the circulating pump automatically with the booster heater.

The thermostat on the stove water flow pipe enables the pump to start automatically when the stove is lit and the water temperature gets to 60 dg C.

HORSTMANN TIME CLOCK  
425 CORONET

THERMOSTAT ON  
SOLID FUEL / WOODBURNER  
WATER FLOW PIPE  
HONEYWELL 641B. S.P.D.T.

**DUNSLEY 6KW BOOSTER HEATER (with solid fuel stove pump thermostat)**

JCW	06.03.15
Drg No.	A4/E1605a
Issue No.	1